



SV - X110

T - PRO

(RETENEDOR)

Poligono Industrial Foradada - 08580 - Sant Quirze de Besora (Barcelona)

Telf. 34-93.852.92.23, Fax.34-93.852.91.59

Export. Telf. 34-93.852.96.15, Fax.34-93.852.91.76

e-mail: saheco@saheco.com - web: www.saheco.com

MADE IN E.U.

**GRUPO
TORREMAT**




NOV. 2018

038060602


RETENEDOR

(a)

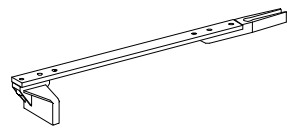


(2)

(b)




1

(c)




1

(d)




1

(e)

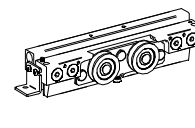


1

(f)




1

(g)




1

(h)




1

(i)

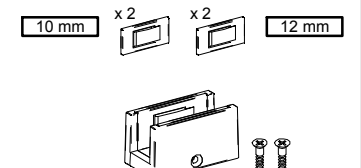

1


(j)

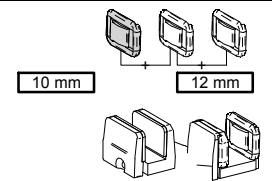


1

RETENEDOR / Retaining stopper / Frein de retenue

IZQUIERDA / Left / Gauche

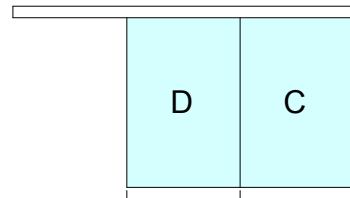

Min. 600mm
Max. 1000mm (kit 3m)
1330mm (kit 4m)
1600mm (kit 6m)

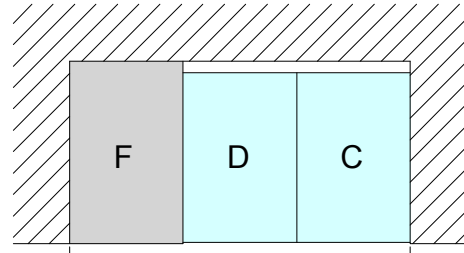


P= Min. 1850mm




C= PUERTA EXTERIOR / Exterior door / Porte extérieure
D= PUERTA INTERIOR / Interior door / Porte intérieure
F= HOJA FIJA / Fixed sheet / Panneau fixe

"P"	"S" Max.	"S" Min.
2050	250	50
2000	200	
1950	150	
1900	100	
1850	50	

DERECHA / Right / Droite

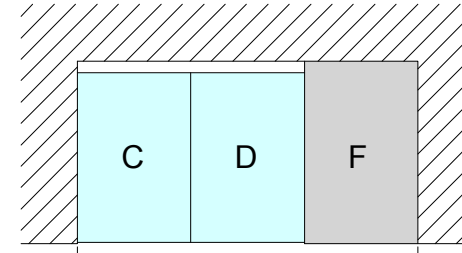



P= Min. 1850mm

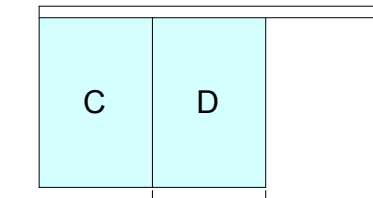

Min. 600mm
Max. 1000mm (kit 3m)
1330mm (kit 4m)
1600mm (kit 6m)



C= PUERTA EXTERIOR / Exterior door / Porte extérieure
D= PUERTA INTERIOR / Interior door / Porte intérieure
F= HOJA FIJA / Fixed sheet / Panneau fixe

INSTALACIÓN ENRASADA / Levelled assembly / Mountage arasé

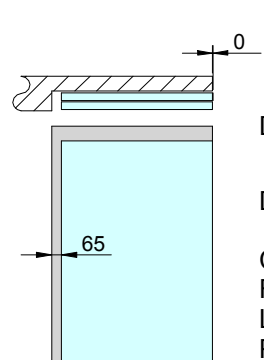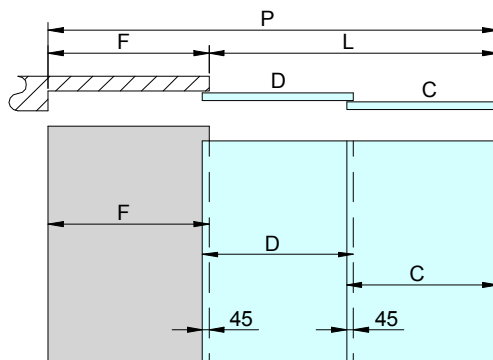

$$D = \frac{L + 90}{2}$$
$$D = \frac{P + 25}{3}$$
$$C = D$$
$$F = D + 65$$
$$L = P - F$$
$$P = L + F$$


INSTALACIÓN SOLAPADA / Overlap assembly / Mountage sournois

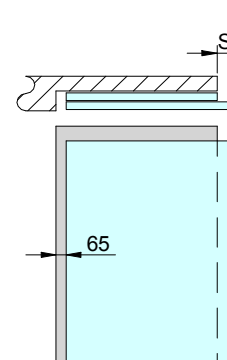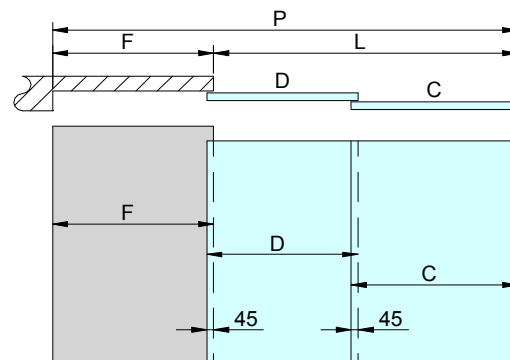

$$D = \frac{L + 90 - S}{2}$$
$$D = \frac{P + 25 - S}{3}$$
$$C = D + S$$
$$F = D + 65$$
$$L = P - F$$
$$P = L + F$$


EJEMPLO INSTALACIÓN / Assembly example / Exemple de mountage

RETENEDOR

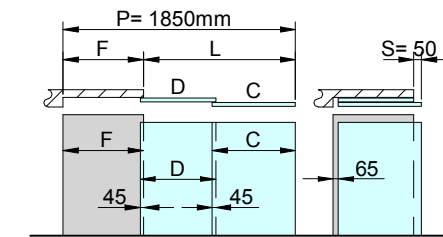


$$D = \frac{1850 + 25 - 50}{3} = 608$$
$$C = 608 + 50 = 658$$
$$F = 608 + 65 = 673$$
$$L = 1850 - 673 = 1177$$
$$P = 1177 + 673 = 1850$$

MONTAJE A TECHO / Ceiling mount / Assemblage a plafond / Montaggio a soffitto

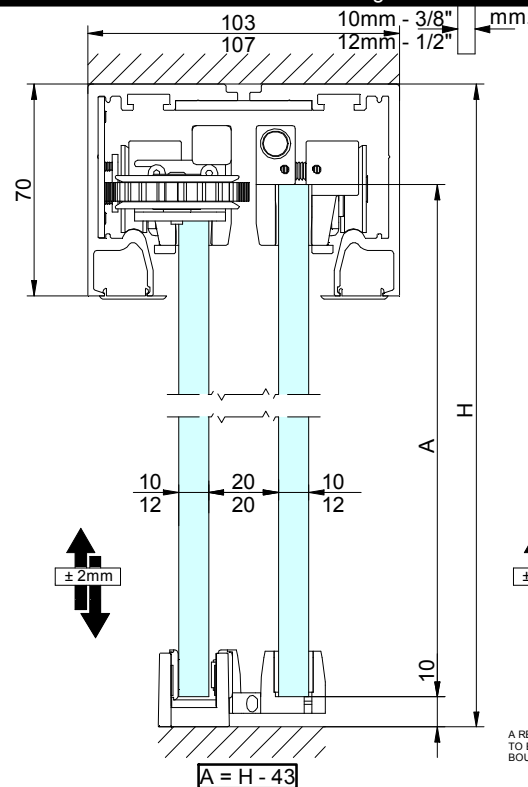


$$A = H - 43$$

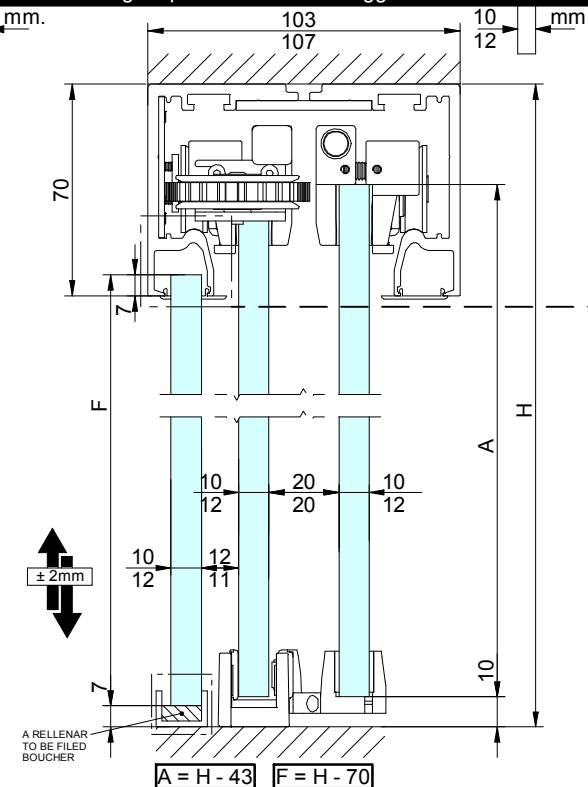


$$A = H - 43$$
$$F = H - 70$$


OPCIONAL / Optional / Optionnel		
CODE	mm.	UNION PVC PVC GASKET JOIN PVC
004582	10	
004587	12	

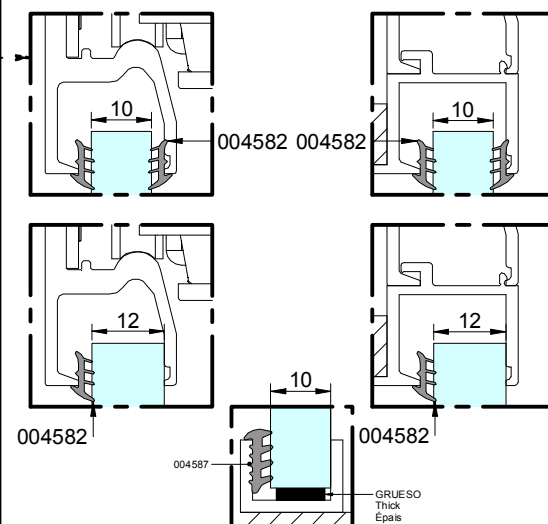

MONTAJE A FALSO TECHO / False ceiling mount / Assemblage faux plafond / Montaggio a falso soffitto

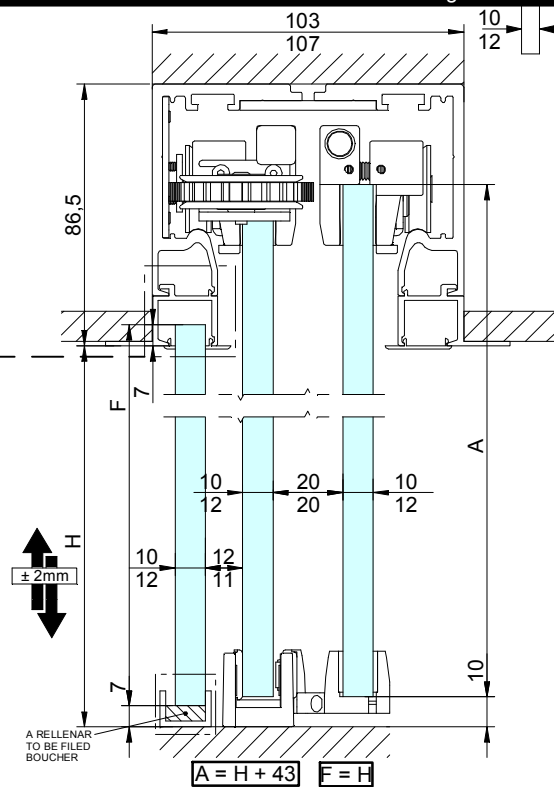

$$A = H + 43$$
$$F = H$$

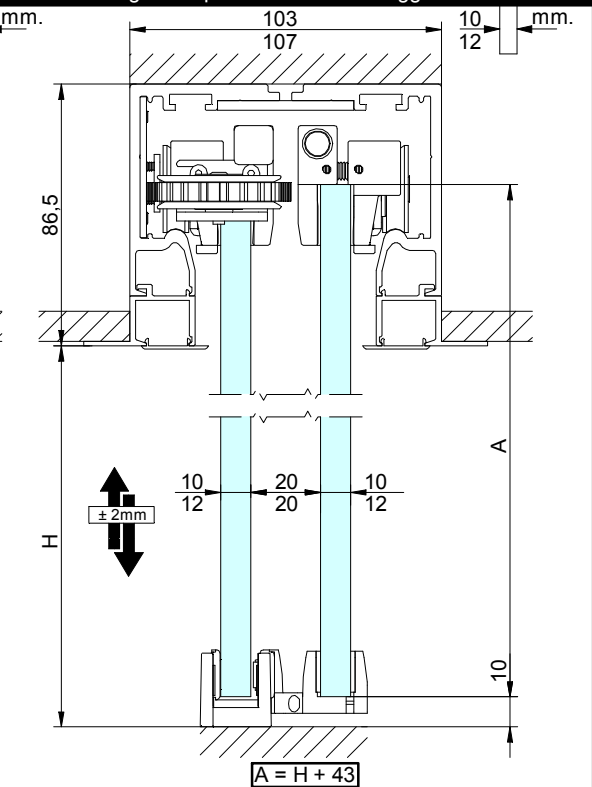

$$A = H + 43$$

MONTAJE PINZAS / Clamps assembly / Montaggio pinza

(x1) TORNILLO ANTIDESCARRILAMIENTO
Anti-derailment screw

(x4) TORNILLO AJUSTE GROSOR VIDRIO
Glass thickness settings screw

(x1) TORNILLO RETENEDOR
Retainer screw

(x4) TORNILLO APRIETE PINZA
Clamp tighten screws

(x1) TORNILLO REGULACIÓN ALTURA
Height adjustment screw

1

2

3

4

5

RETENEDOR / Retainingstopper / Frein de retenue

IZQUIERDA / Left / Gauche

MIN. 600mm

165

270

165

MIN. 600 + S

245 + S

165

25

2

"S" = SOLAPE / Overlap / Sournois

D

C

e

d

f

c

MEDIDA CORREA / Leash measure / Mesure ceinturon

F

D

C

MEDIDA CORREA / Leash measure = $2 \times (D + 140\text{mm})$

6

7

CORREA
Leash

8

IZQUIERDA
Left
Gauche

a

a

g

MONTAJE A TECHO / Ceiling mount / Assemblage a sotre / Montaggio a soffitto

9

Ø 5,5

Ø 10

200

200

100

* TORNILLO DIN-7505 4,5x40mm

10

11

F

g

0

GUIADOR / Guide / Guide

12

F

i

23






23

13




h

! NO APRETAR
Do not push






MONTAJE A TECHO CON VIDRIO FIJO
Ceiling mount with fixed glass / Assemblage a sotre avec verre fixe / Montaggio con vetro fisso

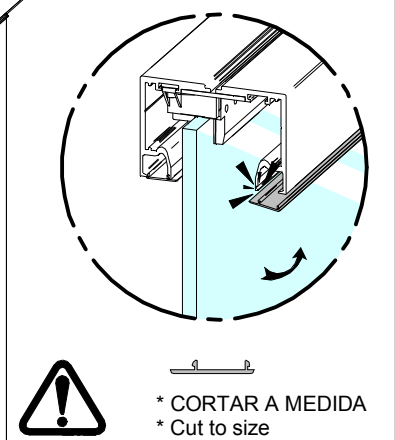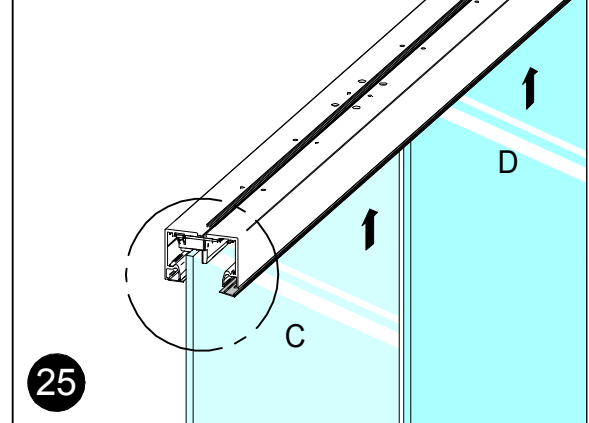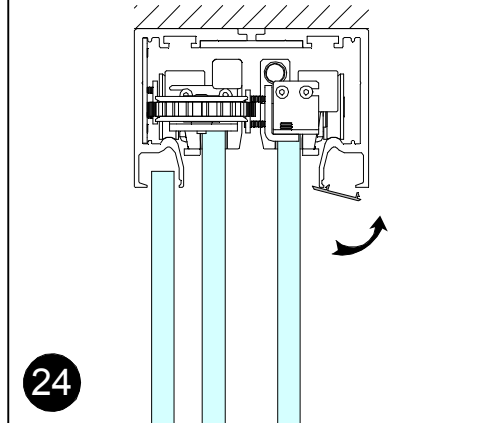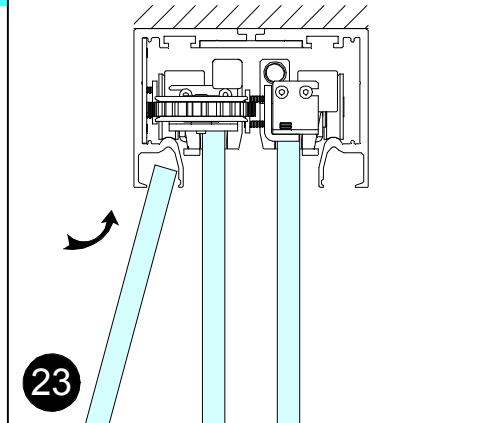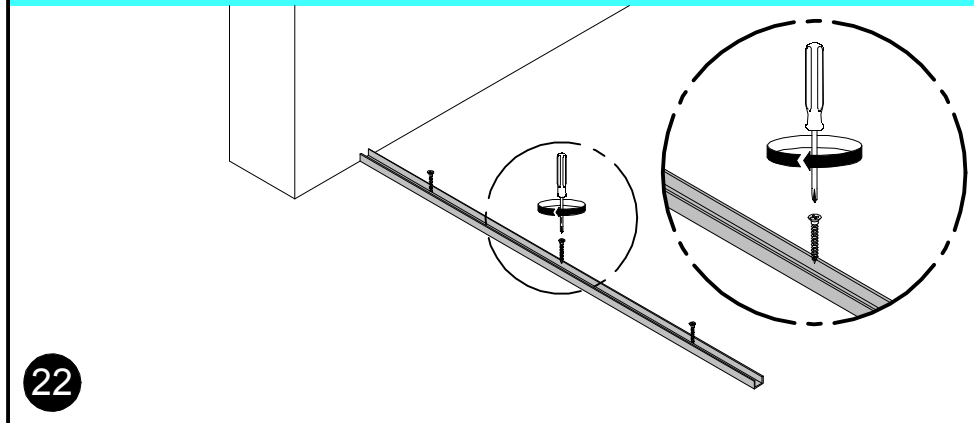

MONTAJE A FALSO TECHO
False ceiling mount / Assemblage faux plafond / Montaggio a falso soffitto

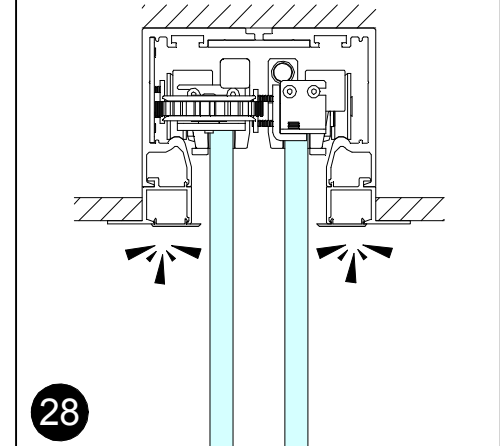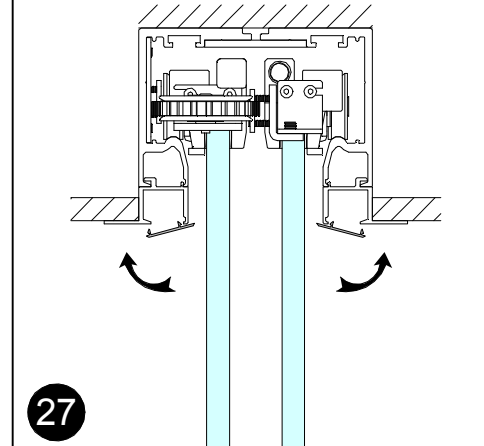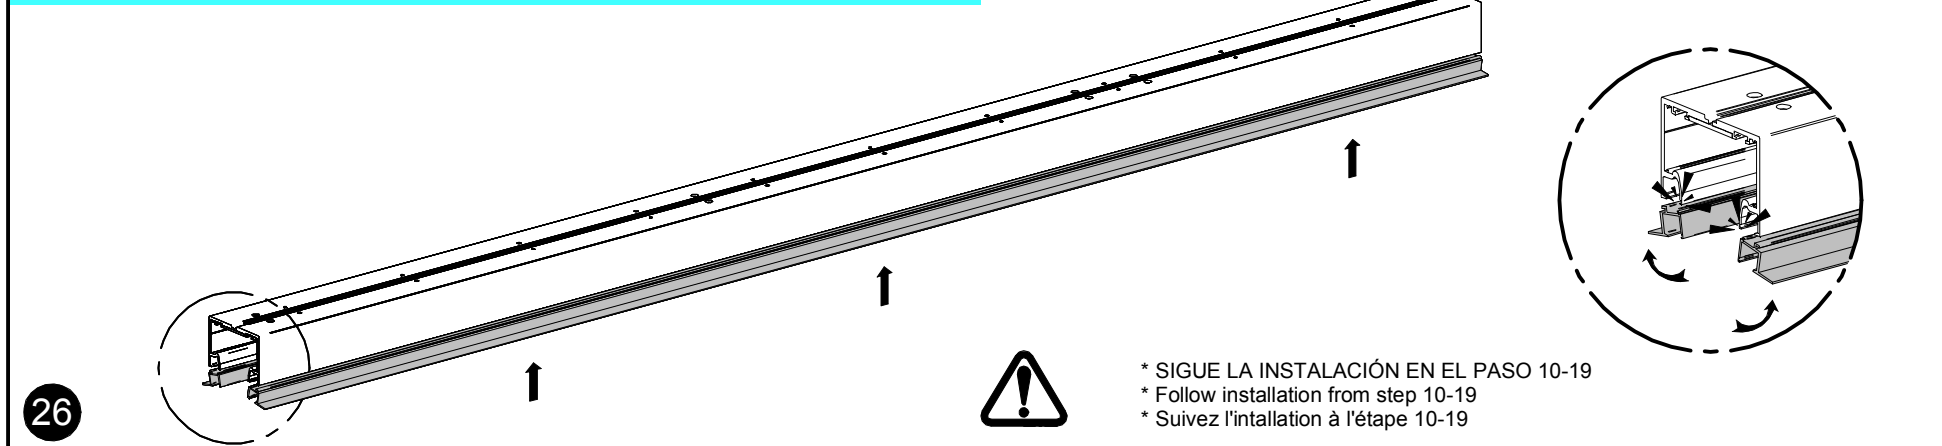

MONTAJE A FALSO TECHO CON VIDRIO FIJO
False ceiling mount with fixed glass / Assemblage faux plafond avec verre fixe / Montaggio a falso soffitto con vetro fisso

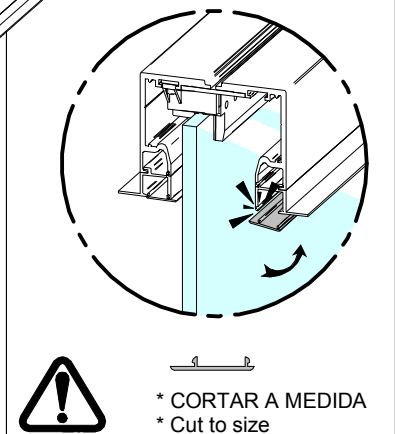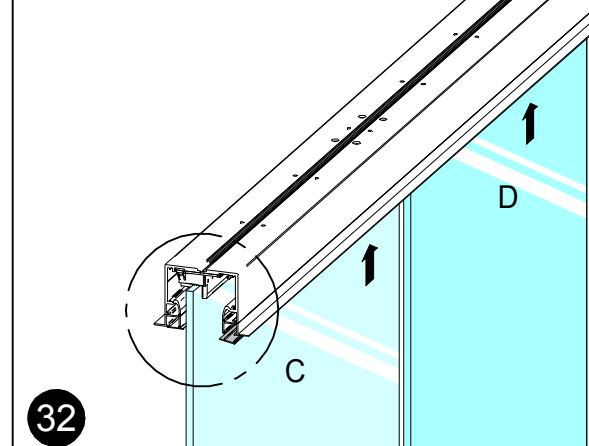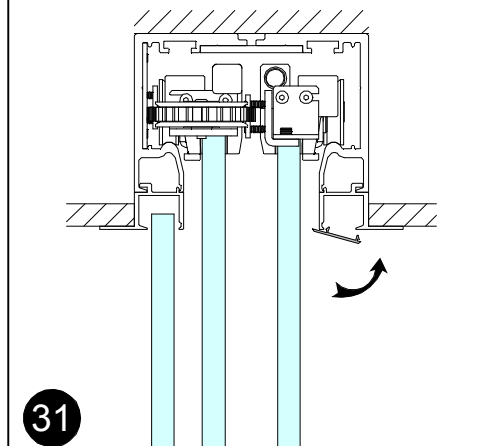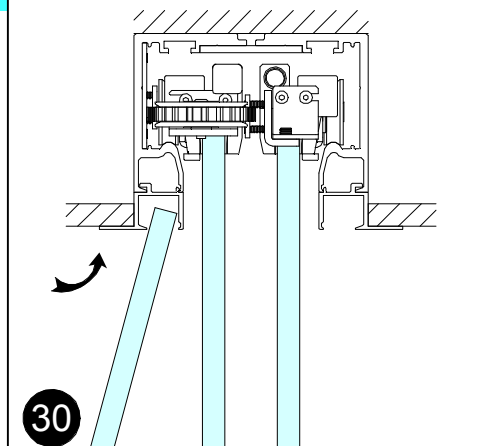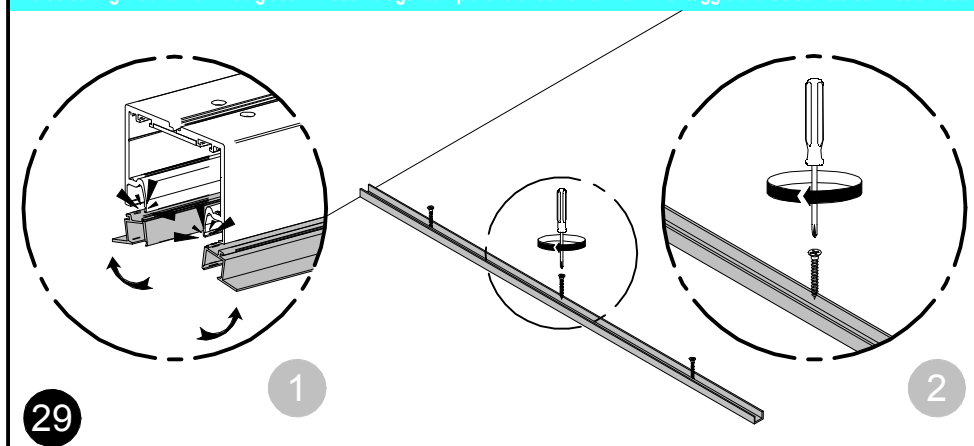

MONTAJE GUIADORES INFERIORES / Lower guiders mounts / Assemblage guiders inférieurs

